



Tool Rental Center


# Tool Turn Guide

Pro Heated Carpet Cleaner  
Model #108779



Supplier Technical Support: 800-932-3030

Supplier Website: [HD.drieaz.com](http://HD.drieaz.com)

<b>PURPOSE</b>	<ul style="list-style-type: none"> <li>• Follow the directions below to ensure tool is in working order</li> <li>• Ensure that tool is properly maintained</li> </ul>
<b>SAFETY</b> 	<ul style="list-style-type: none"> <li>• Plug 3-prong plug into matching grounded outlet; do not use with adapter or with an extension cord.</li> <li>• Inspect cord before each use; do not use with damaged power cord.</li> <li>• Keep wiring and motor dry; do not operate in standing water. If electrical components become wet, allow them to dry completely before using.</li> <li>• Keep away from open flames and heat sources. Do not use or store where flammable materials may be present.</li> </ul>

## Tool Inspection Process:

Step	Action
1	Inspect electrical cord and plug for fraying, cuts, or any other damage. Make sure that all three plug prongs are still in place. If any damage is present, replace cord with approved replacement part.
3	Inspect the spray jet, solution hose, and fittings. Add 1 gallon of hot water to the solution tank. Attach hoses to machine. Turn the unit on in cleaning mode. Depress the trigger on the hand tool. Inspect the solution hose, connectors, and trigger valve for cracks, breaks, or leaks. Check for even spray pattern out of jets. If jet is clogged or spraying an uneven pattern, remove jet and clean out with compressed air. Replace jet and re-test. Replace cleaning tool assembly if cracks or breaks are present or if leaks persist.
4	Inspect vacuum hose for cracks, breaks, or leaks. Replace cleaning tool assembly if needed.
5	Inspect the hand tool. Check for debris in the vacuum inlet slots and remove debris. If the hand tool shows wear or damage, replace cleaning tool assembly.

**Tool Cleaning Process:**

<b>Step</b>	<b>Action</b>
1	Wipe off exterior with clean damp cloth. To restore exterior shine, use an automotive vinyl cleaner/protectant product.
2	Remove solution tank cover, lift out assemblies and rinse clean. Allow assemblies to air dry, and then reinstall.
3	Rinse solution tank with clean water and empty to ensure no detergents or rinse agents remain in the tank.
4	Rinse the waste tank with clean water and empty to help prevent damaging deposits and the growth of odor-causing bacteria.
5	Reassemble unit. Turn blower on ONLY on and allow to run for 2 minutes to remove remaining moisture from the blower.
6	Release water pressure with accessory tool spray trigger lever, then disconnect vacuum hose and solution hose. Allow any water or debris to drain out of vacuum hose. Coil hoses for storage.
7	Coil power cord and secure with strap.
8	Unit is now ready to be returned to service.