


Congratulations on your purchase of the **HOSS 700® 240 V 50 Hz** Rotary Cleaning Tool from **SAPPHIRE SCIENTIFIC!**

This instruction/parts manual is a guide for operating and servicing your Rotary Cleaning Tool.

Proper operation and service are necessary to ensure the outstanding performance of this product. The following service methods outlined in this manual are detailed in a manner that operation and servicing may be performed properly and safely. Because service levels vary due to the skill of the mechanic, tools and parts availability, ensure that prior to attempting any repair, you are familiar with this equipment and have the proper tools. Any questions regarding the operation, service, or repair of this unit should be directed to your nearest **SAPPHIRE SCIENTIFIC** dealer.

The headings **WARNING** and **CAUTION** are utilized to warn you that steps must be taken to prevent personal injury or damage to the equipment. Please make sure that you have read and understand these instructions entirely before proceeding with the operation of this unit.

 **WARNING!** Do not alter or modify your **HOSS 700** in any way. Use only replacement parts authorized by **SAPPHIRE SCIENTIFIC, Inc.** Modifications or use of unapproved parts could create a hazard and will void your warranty. Contact your authorized Sapphire dealer for assistance.

BE SURE TO FILL OUT THE
WARRANTY CARD ONLINE AT:

www.sapphirescientific.com

Record your units' serial number here for future reference or if you should need to contact the factory in the future for any reason.

S/N:

This service and operations manual is written specifically for **SAPPHIRE SCIENTIFIC HOSS 700® 240 V 50 HZ** Rotary Cleaning Tool manufactured by:

SAPPHIRE SCIENTIFIC
2604 Liberator
Prescott, AZ 86301
USA

The information contained in this document is subject to change without notice and does not represent a commitment on the part of **SAPPHIRE SCIENTIFIC**.

All rights reserved. Copyright 2012 by **SAPPHIRE SCIENTIFIC**. No part of this work may be used or reproduced in any form or means without the express written consent and permission of **SAPPHIRE SCIENTIFIC**.

Published by **SAPPHIRE SCIENTIFIC**.
Revised: July 2012; Rev A

Printed in USA

MODEL HOSS 700® 240 V 50 HZ
MANUAL
PART# 49-086

SAPPHIRE SCIENTIFIC LIMITED WARRANTY

HOSS 700 240 V 50 HZ Rotary Cleaning Tool

What Does This Warranty Cover?

This warranty is provided to the original purchaser only.

How Long Does This Warranty Last?

We limit all implied warranties to

- One (1) year from the date of purchase on parts and labor;
- Three (3) years on the housing.

What Sapphire Scientific Will Do:

If a defect in materials or workmanship occurs within the warranty period, Sapphire Scientific at its election will repair or replace the defective part at no charge.

What This Warranty Does Not Cover:

This warranty does not cover or apply to defects due directly or indirectly to misuse, abuse, disassembly, alteration, corrosive chemicals, improper voltage, fire, flood, negligence, accident, improperly or incorrectly performed maintenance or repair, or failure to perform necessary or recommended maintenance or repair (see your Owner's Manual) or if the use of this product is not in compliance with the instructions and specifications for its use.

OTHER THAN THE WARRANTIES PROVIDED HEREIN, SAPPHIRE SCIENTIFIC MAKES NO EXPRESS OR IMPLIED, ORAL OR WRITTEN WARRANTIES WITH RESPECT TO THIS PRODUCT OR WORKMANSHIP AND ALL WARRANTIES IMPLIED BY LAW INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. WE SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY OR FOR INCIDENTAL, CONTINGENT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING FROM USE OF OUR PRODUCTS. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

How Do I Get Service?

In order to be eligible for service under this warranty you MUST do the following: (a) visit warranty.sapphirescientific.net and register your purchase to ensure you receive any important product releases; (b) write or call for a return material authorization (RMA); and (c) have the serial number and original proof of purchase available. Contact us at:

Sapphire Scientific
2604 Liberator
Prescott, AZ 86301
886-445-3030

We will inspect the product without charge and contact you within 72 hours of our receipt of the product to give you the results of our inspection. If our inspection uncovers a defect we will repair or replace the product, at our election. If the product is returned to us on or before ninety (90) days from the date of purchase, we will pay for the cost of shipping it to Sapphire Scientific and the cost to return it to you. If the product is returned to us after the expiration of ninety (90) days from the date of purchase, all shipping costs shall be paid by the purchaser.

If it is determined that there is no defect in the product, or that the defect resulted from causes not within the scope of our warranty, then the product will be repaired or replaced only at your request and at your expense and you must bear all shipping costs.

How Does State Law Apply?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

49-071, Rev A 2011-04

Table of Contents

SECTION ONE: GENERAL INFORMATION	1
1. SAFETY.....	2
Safety guidelines and warnings	
2. INTRODUCTION.....	3
Introduction, acceptance of shipment and equipment listing	
SECTION TWO: UNIT ASSEMBLY	4
3. ASSEMBLY.....	5
Part identification, required tools and assembly instructions	
SECTION THREE: SETUP AND OPERATION	12
4. SETUP.....	13
Setup instructions	
5. OPERATION	14
Operation Instructions	
SECTION FOUR: MAINTENANCE AND TROUBLESHOOTING	16
6. MAINTENANCE.....	17
Maintenance recommendations	
7. TROUBLESHOOTING	20
Troubleshooting tips	
SECTION FIVE: PARTS LISTING	21
8. PARTS LISTING.....	22
Illustrated parts breakdown	
SECTION SIX: REFERENCE INFORMATION	35
9. REFERENCE.....	36
Warranty Registration, Contact, Specifications and Service Records	

SECTION 1:

GENERAL INFORMATION

1. SAFETY

Safety warnings and guidelines2

2. INTRODUCTION TO YOUR HOSS 700 ROTARY CLEANING TOOL

Introduction3

Acceptance of shipment.....3

1. SAFETY



WARNINGS FOR YOUR SAFETY!

1. **Read through the operation portion of this manual before using your unit.** Failure to adhere to instructions could result in personal injury or could be fatal.
2. **WARNING! Do not alter or modify your HOSS 700 in any way.** Use only replacement parts authorized by **SAPPHIRE SCIENTIFIC**, Inc. Modifications or use of unapproved parts could create a hazard and will void your warranty. Contact your authorized Sapphire dealer for assistance.
3. **The HOSS 700 is shipped with the handle and electrical cord unassembled.** Follow the full assembly instructions in this manual before attempting to use or plug in the unit.
4. **WARNING! Electric shock hazard, rotating parts, hot surface hazards.** Unplug unit before opening cover for cleaning or service. Unit must be properly grounded.
5. **Inspect power cord before use.** If cord is damaged, do not use. Always grasp the plug (not the cord) to unplug.
6. **The unit must be operated on a 240V/50Hz circuit.**
7. **Do not operate in standing water.**
8. **Do not operate in rain or snow.** If electrical components become wet, allow them to dry before using.
9. **Do not attempt to repair the unit.** For technical support, see an authorized Sapphire Scientific dealer or call Sapphire Scientific Service Department at 866-445-3030.

NOTE: Protect from freezing during storage and transport. Damage caused by freezing is not covered by the product warranty.

2. INTRODUCTION

The HOSS 700 Rotary Cleaning Tool greatly improves the cleaning performance and efficiency on a wide variety of carpet types.

- High-flow solution orifices and high efficiency vacuum plates
- 1/2 HP 1725 RPM motor
- Sealed low-maintenance gear box
- 6 inch non-scuffing wheels for easy transport
- Fully adjustable handle for maximum operator comfort and control

ACCEPTANCE OF SHIPMENT

When receiving your HOSS 700 unit, please make the following acceptance check:

- The unit should not show any signs of damage. If there is damage, notify the common carrier immediately.
- Carefully check your equipment and packaging list. Please see SECTION 5: PARTS LISTING in this manual for a full list of components.

SECTION 2:
UNIT ASSEMBLY

1. ASSEMBLY

Part Identification.....5

Required Tools.....7

Assembly Instructions.....7

3. ASSEMBLY

PART IDENTIFICATION

Figure II.

- A. Handle Assembly
- B. Solution Control Lever
- C. Motor Control Lever
- D. Solution Line Inlet Connection
- E. Connection For Rotary Head Solution Line
- F. Vacuum Hose Attachment
- G. Power Cord Connector
- H. Inline Solution Filter
- J. Twist-Lock Connector

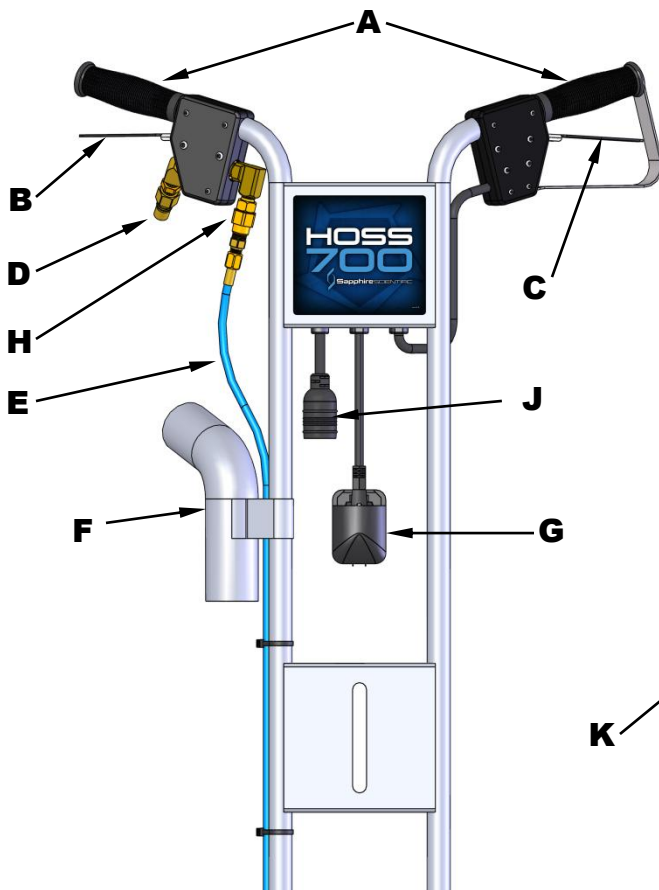


Figure I

Figure II.

- K. Transport Wheels
- L. Vacuum Inlet Cap
- M. Carry Handle
- N. Axle
- P. Handle Brace
- Q. Junction Cover Plate
- R. Gear Box Plug
- S. Motor Housing
- T. Gear Box Frame

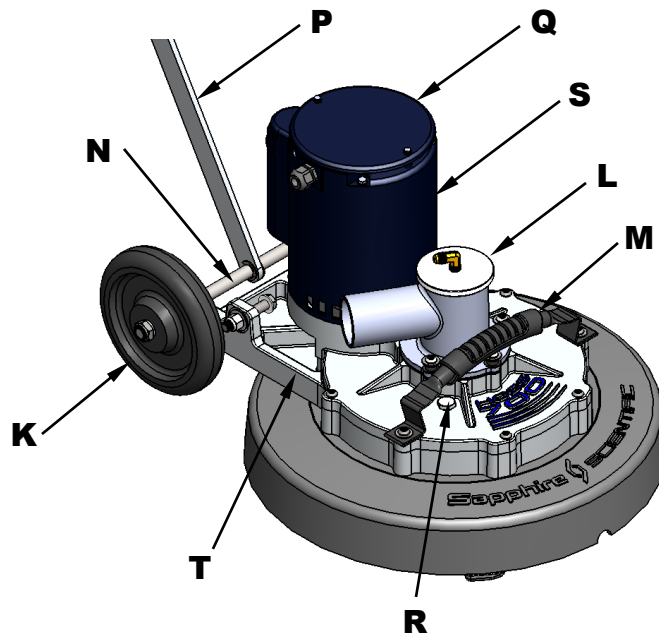


Figure II

PART IDENTIFICATION (CONTINUED)

Figure III.

U. Solution Orifices (5X)

V. Access Notch

W. Vacuum Feet (5X)

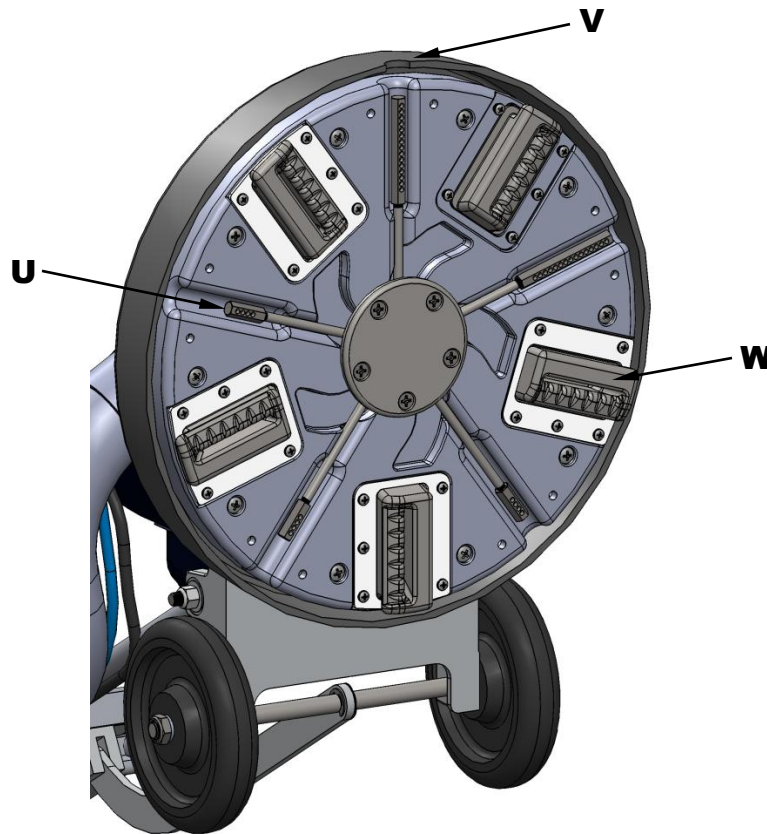


Figure III

REQUIRED TOOLS

- Pliers
- Phillips Head Screwdriver
- 1/4 inch ratchet
- Two 9/16 inch wrenches

! WARNING! Complete entire Assembly Instructions before attempting to plug in or use the HOSS 700 for the first time!

ASSEMBLY INSTRUCTIONS

1. Lift the handle brace and rotate it to the back side of the unit (Figure 1.). You will need to flex the handle brace slightly around the motor housing.
2. Slide the handle brace to the center of the axle and attach the E clip (a) retaining ring to the axle (Figure 2.). Make sure the wave washer (b) is located between the handle brace and the E clip slot.

Tip: Pliers may be needed to compress the wave washer (b) against the handle brace to fit the E clip (a) into the slot.

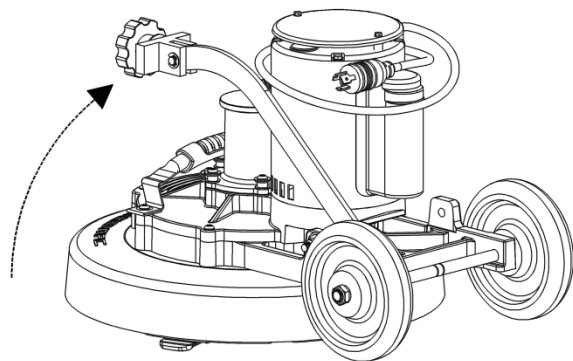


Figure 1.

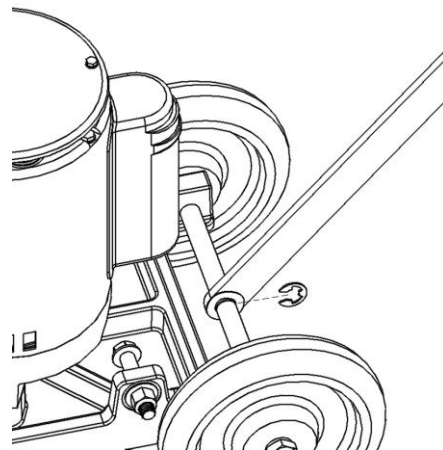


Figure 2.

ASSEMBLY INSTRUCTIONS (CONTINUED)

3. Attach the Handle Assembly to the Gear Box Frame

(Figure 3. and Figure 4.)

Attach one side of the handle assembly to the gear box frame using one 3/8-16 x 2-1/4 inch hex head bolt (c), one 3/8 inch stainless steel washer (d), two 3/8 nylon washers (e) and one 3/8-16 stainless steel lock nut (f) as shown (Figure 3.).

Place one nylon washer (e) on either side of the handle bar with the stainless washer (d) on the outside under the lock nut (f) (Figure 4.).

Repeat this step to attach the opposite side of the handle assembly.

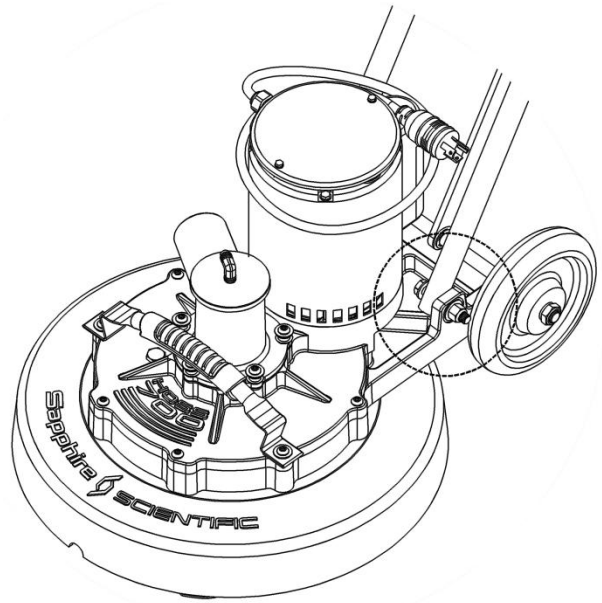


Figure 3.

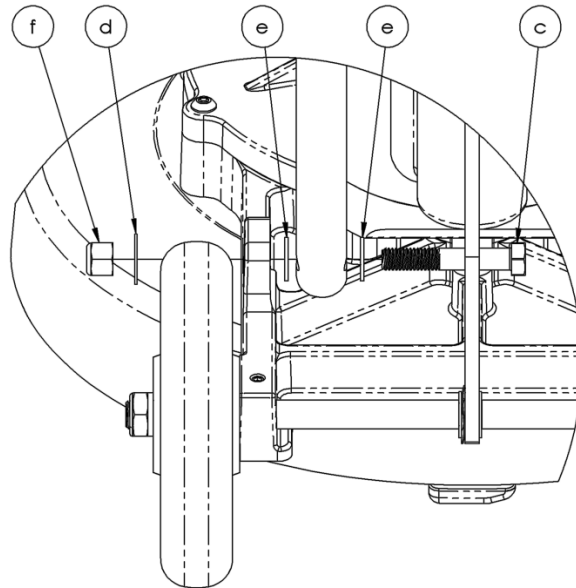
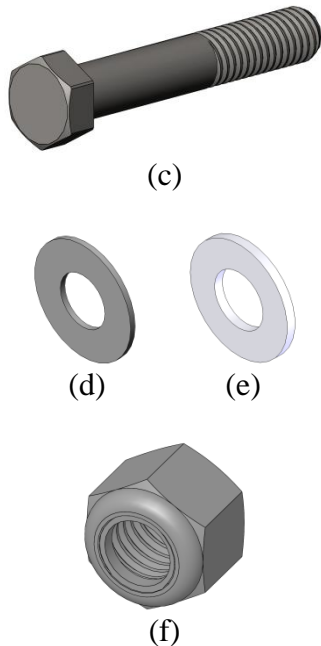


Figure 4.

ASSEMBLY INSTRUCTIONS (CONTINUED)

4. Attach the Handle Brace to the Handle Assembly (Figure 5.).

Place one 9/16 x 1-3/8 inch stainless steel flat washer (g) and one 1/2 x 1-1/2 inch rubber washer (h) on the threaded shaft of the adjustment knob (k).

Insert the adjustment knob through the adjustment slot in the handle and thread into the T-bracket (m) located at the end of the handle brace.

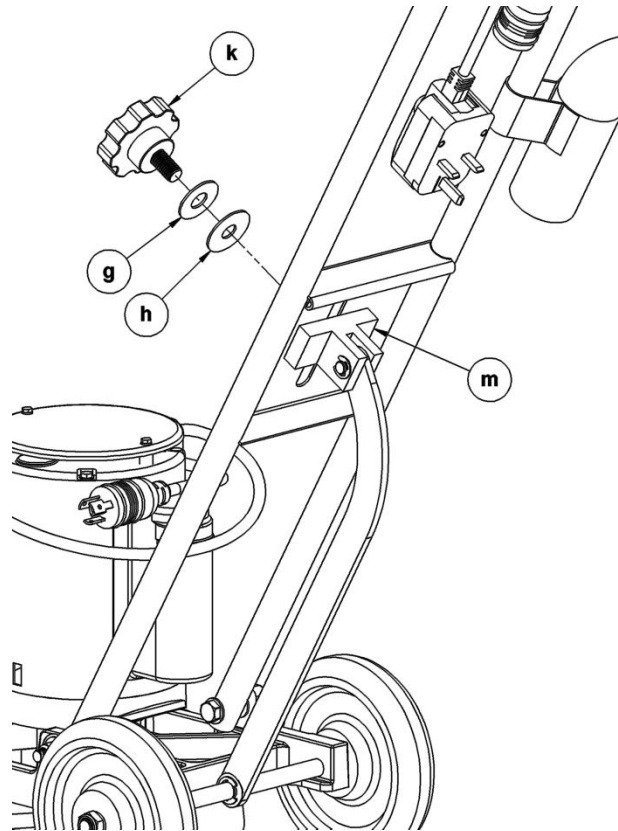
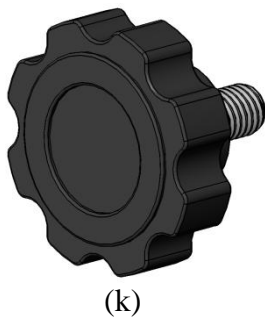
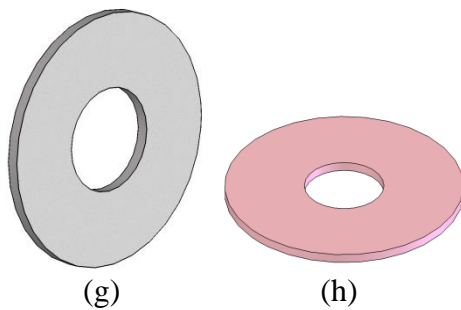


Figure 5.

5. Attach the Solution Line (Figure 6.)

Attach the blue solution line (n) to the top of the vacuum inlet cap (p).

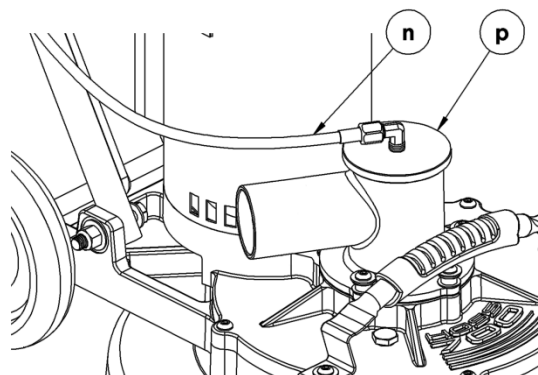


Figure 6.

ASSEMBLY INSTRUCTIONS (CONTINUED)

6. Connect the Power Cord Ends (Figure 7.)

Connect the Twist-Lock power cord connectors (q), (r) by inserting the plug into the receptacle as shown in Figure 7 and turning slightly until the two connectors “lock” together.

7. Install the Vent Plug (Figure 7)

Replace the temporary gear box plug (s) with the supplied vent plug (t) as shown in Figure 7.

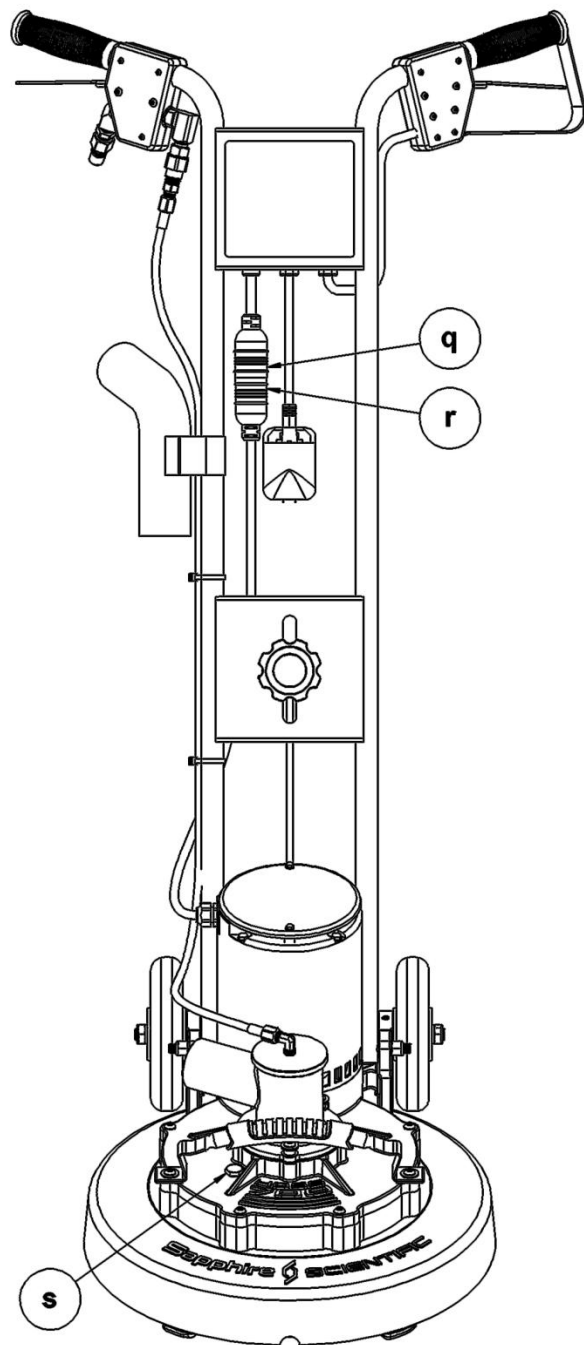


Figure 7.

ASSEMBLY INSTRUCTIONS (CONTINUED)

8. Connect the Vacuum Hose (Figure 8.)

Slide one end of the 2 inch vacuum hose (u) over the vacuum port on the gear box and the other end onto the vacuum tube on the handle as shown in Figure 8.

Using two #32 hose clamps (v), secure the hose to the vacuum port and the vacuum tube.

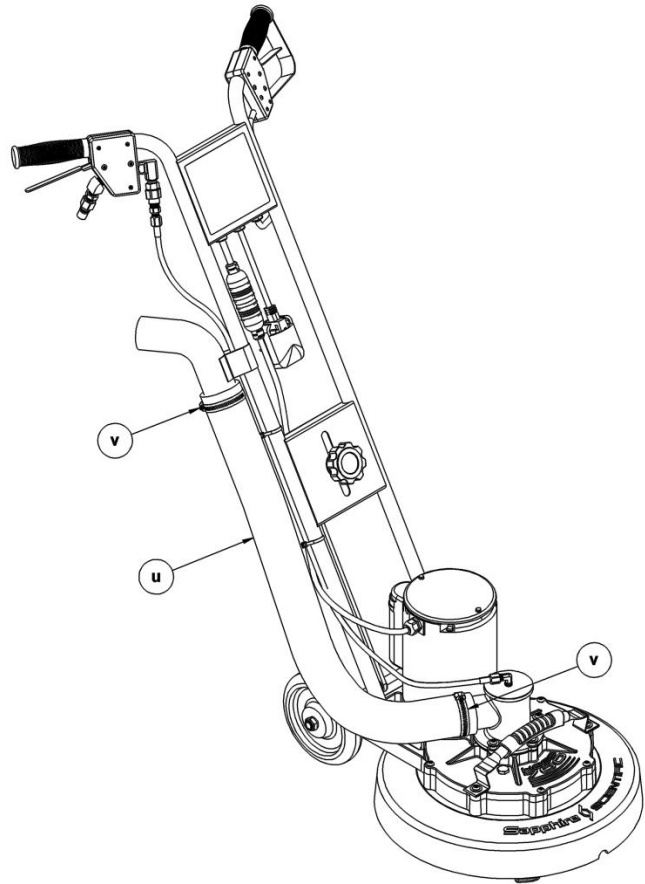


Figure 8.

SECTION 3: **SETUP AND OPERATION**

10. SETUP

Setup Instructions.....	13
-------------------------	----

11. OPERATION

Starting the Unit.....	14
Controlling the Unit	14
Adjusting the Solution Flow	14
Cleaning and Operational Tips	15

4. SETUP


SETUP INSTRUCTIONS

1. Adjust handle height for operator comfort. Loosen black knob, move handle up or down to desired height and retighten knob.

TIP: To maximize control and operator comfort, position the handles at hip height.

2. Attach vacuum hose to vacuum outlet. The HOSS 700 is fitted with a 2 inch OD vacuum outlet.
3. Attach your solution hose to the quick-connect fitting.
4. Plug in to power source. Use an extension cord no smaller than 14 gauge and rated for 240 Volts, not exceeding 50 feet in length. Attach to a suitable 240V/15 amp supply.

⚠ WARNING! Electrical shock hazard. Unit must be properly grounded. Do not remove grounding prong or otherwise alter the grounding system.

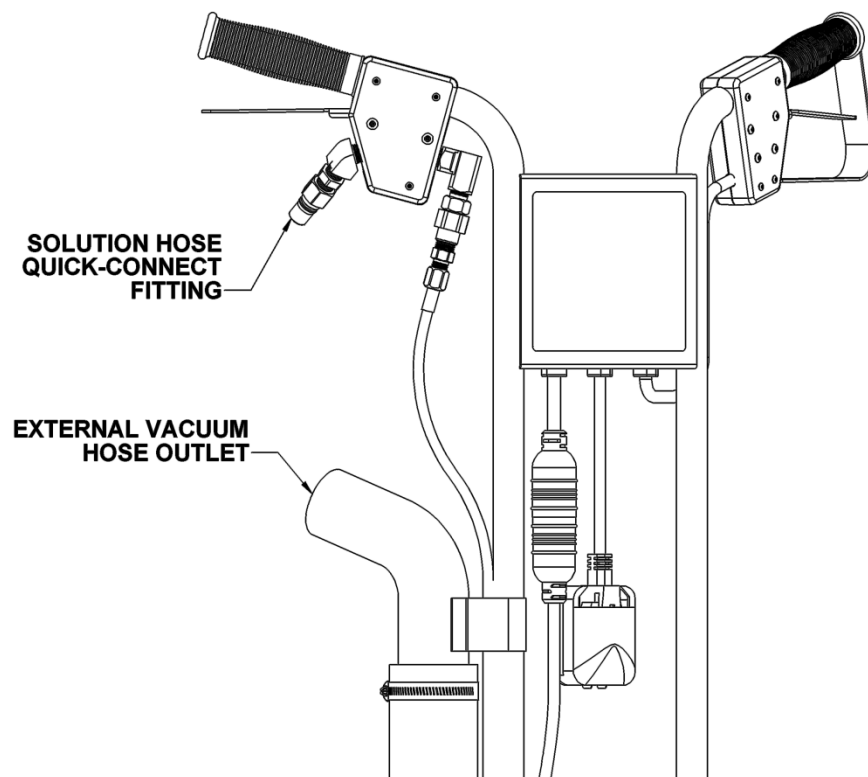

5. OPERATION

⚠ WARNING! Rotating parts. Keep hands, feet and all cords and hoses clear. Make sure the area to be cleaned is free from obstructions and place power cords and hoses well away from the unit.

STARTING THE UNIT

1. Turn on the carpet cleaning extractor vacuum and solution pump.
2. Start the flow of solution first. Grasp handles firmly and squeeze right trigger.
3. Balance the unit with the head flat on the carpet. Then squeeze the left trigger to start the rotary head.

CONTROLLING THE UNIT


- To move to the right, LIFT the handle with both hands slightly.
- To move to the left, LOWER the handle with both hands slightly.

TIP: Only small adjustments in the handle position are needed to control the unit. If you are unfamiliar with maneuvering this cleaning tool, practice first in an open and unobstructed area.

TIP: Do not tip the unit to the left or right, as this will impair vacuum performance and make the unit difficult to control.

ADJUSTING THE SOLUTION FLOW

The HOSS 700 is shipped with no orifice installed in the in-line filter assembly. The unit can be operated without an orifice when maximum flow is required. The .052 orifice is recommended to provide adequate solution flow and pressure for most cleaning applications. For other situations, .048 and .057 inch orifices are provided. The orifice is easily changed by disassembling the in-line filter and changing out the orifice. Changing the orifice size allows the user to customize the flow rate according to soiling conditions and type of cleaning equipment used.

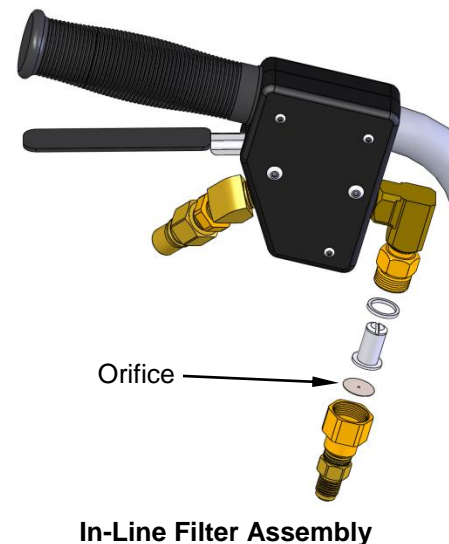

CLEANING AND OPERATIONAL TIPS

Do not operate the HOSS 700 on dry carpet. Doing this may damage carpet fibers.

Do not operate the HOSS 700 on hard surfaces. Doing this may damage the vacuum heads and/or floor surface.

For best results, vacuum the carpet thoroughly before using the HOSS 700.

For best results, always groom the carpet after cleaning.

Always establish adequate drying conditions after cleaning.

SECTION 4:
MAINTENANCE AND
TROUBLESHOOTING

12. MAINTENANCE

Before Each Use17
After Each Use17
Monthly Care18
As Needed18
Transport and Storage19

13. TROUBLESHOOTING

Troubleshooting Table20

6. MAINTENANCE

BEFORE EACH USE



WARNING! Electrical shock hazard. Unplug the unit before performing ANY maintenance task.

- **Inspect the electrical cords for damage.** Look for fraying, cuts, et cetera. Do not use the unit if you find any damage to the electrical cords.
- **Inspect vacuum hoses, solution lines and all fittings for proper function.** Repair or replace as needed.
- **Check manifolds for proper flow.** With solution hose attached and pressurized, lay unit on its side and briefly squeeze the solution control lever. Solution should flow freely and equally from each manifold. If flow is reduced from any manifold, inspect for blockage. Remove the manifold, and with a sharp pointed object, clean the orifices. Take care not to damage the orifices.

AFTER EACH USE

- **Rinse rotary head clean.**
- **Clear vacuum inlet.** Remove the vacuum inlet cap from the vacuum inlet housing and remove any debris. For best results, keep unit on the vacuum while withdrawing the inlet cap. Replace cap securely when finished.
- **Inspect rotary head and vacuum feet for damage.** Replace worn or damaged parts as needed.

MONTHLY

Clean exterior housing. To maintain appearance, wipe down exterior surfaces with a clean damp cloth.

Check solution valve. Check for leaks and replace seals as necessary.


Check orifice and inline filter screen. Loosen the strainer assembly nut and remove the orifice, strainer and strainer washer. Rinse these items in clean water and reassemble. Take care not to over-tighten the strainer assembly nut.

Check gearbox oil levels. Remove vented gear case plug. While looking into vent plug hole, tilt unit back onto its wheels to allow the rotary head to be turned. Turn the head until the vent plug hole is visibly aligned with the hole in the gear web. Now place the unit flat of the floor or table and insert a screwdriver or similar tool to gauge the oil level. If the oil level is less than 1/8 inch, add Sapphire Scientific gear oil (part number 13-053). Do not overfill. Reinstall vent plug when finished.

AS NEEDED

Lubricate the solution line quick-connect couplings. Use a small amount of rust-inhibiting oil such as LPS-3.

Clean inline strainer when solution flow is visibly reduced. To clean the filter, loosen the strainer assembly nut and remove the strainer and strainer washer. Rinse these items in clean water and reassemble the strainer. It is not normally necessary to replace the inline filter element. Be sure to include the nylon washer when reassembling. Take care not to over-tighten the strainer assembly nut.

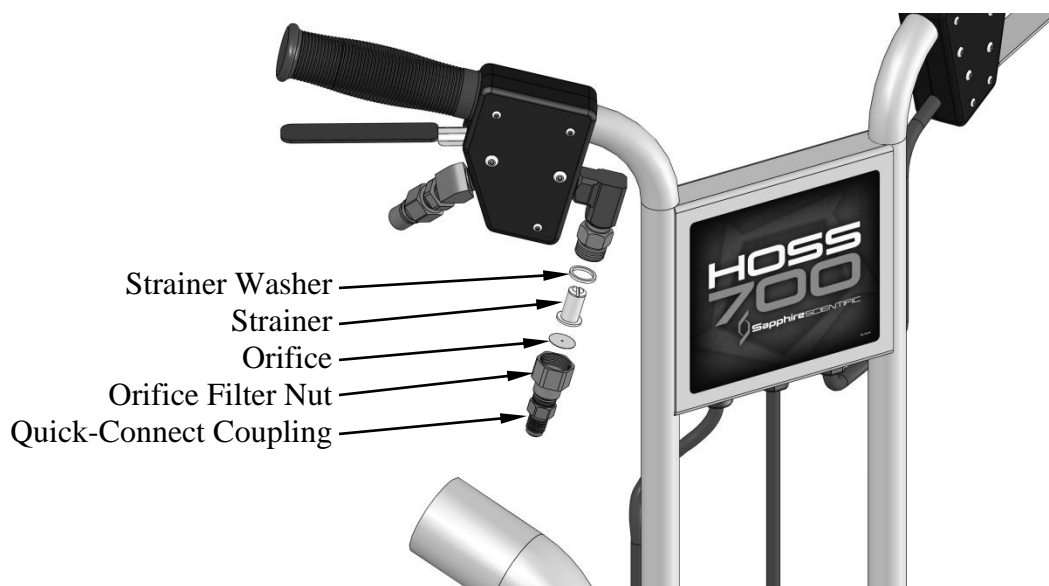

TRANSPORT AND STORAGE

NOTICE: Handle the unit carefully. Do not drop or place the unit where it could fall. Rough treatment can damage this equipment and may create a hazardous condition or void warranty.

- Do not expose electrical components to moisture when transporting in uncovered vehicles.
- Store and transport securely to avoid any damaging impact to internal parts.
- Protect from freezing. Store unit in heated area.

7. TROUBLESHOOTING

TROUBLESHOOTING TABLE

FAULT	CAUSE	SOLUTION
Unit does not operate	No power to machine. Supply circuit breaker tripped.	Reset supply circuit breaker.
Solution leaks at trigger control valve	Valve seal has failed	Install valve rebuild kit
Poor vacuum performance on carpet.	1. Uptake tube clogged with debris. 2. Vacuum slot feet gouged or damaged. 3. Vacuum inlet clogged.	1. Remove lower end and remove obstruction. 2. Replace damaged vacuum slot feet. 3. Remove vacuum inlet cap and remove debris.
Inadequate solution output.	1. Plugged strainer or orifice. 2. Incorrect orifice installed 3. Manifolds plugged or damaged.	1. Rinse strainer and/or orifice clean. 2. Install correct orifice. 3. Clean manifolds/replace damaged manifolds
<i>If the problem you are experiencing is not listed here, call the Sapphire Service Department at 866-445-3030.</i>		




WARNING! Do not alter or modify your **HOSS 700** in any way. Use only replacement parts authorized by **SAPPHIRE SCIENTIFIC**, Inc. Modifications or use of unapproved parts could create a hazard and will void your warranty. Contact your authorized Sapphire dealer for assistance.

SECTION 5: **PARTS LISTING**


14. ILLUSTRATED PARTS LISTING

HOSS 700 240 V 50 HZ	22
Handles	23
Angle Valve	24
Motor Switch	25
Drive Head	26
Gear Box	28
Output Shaft and Gear	30
Vacuum Head.....	31
Vacuum Inlet Cap	33
Solution Inlet Tube	34

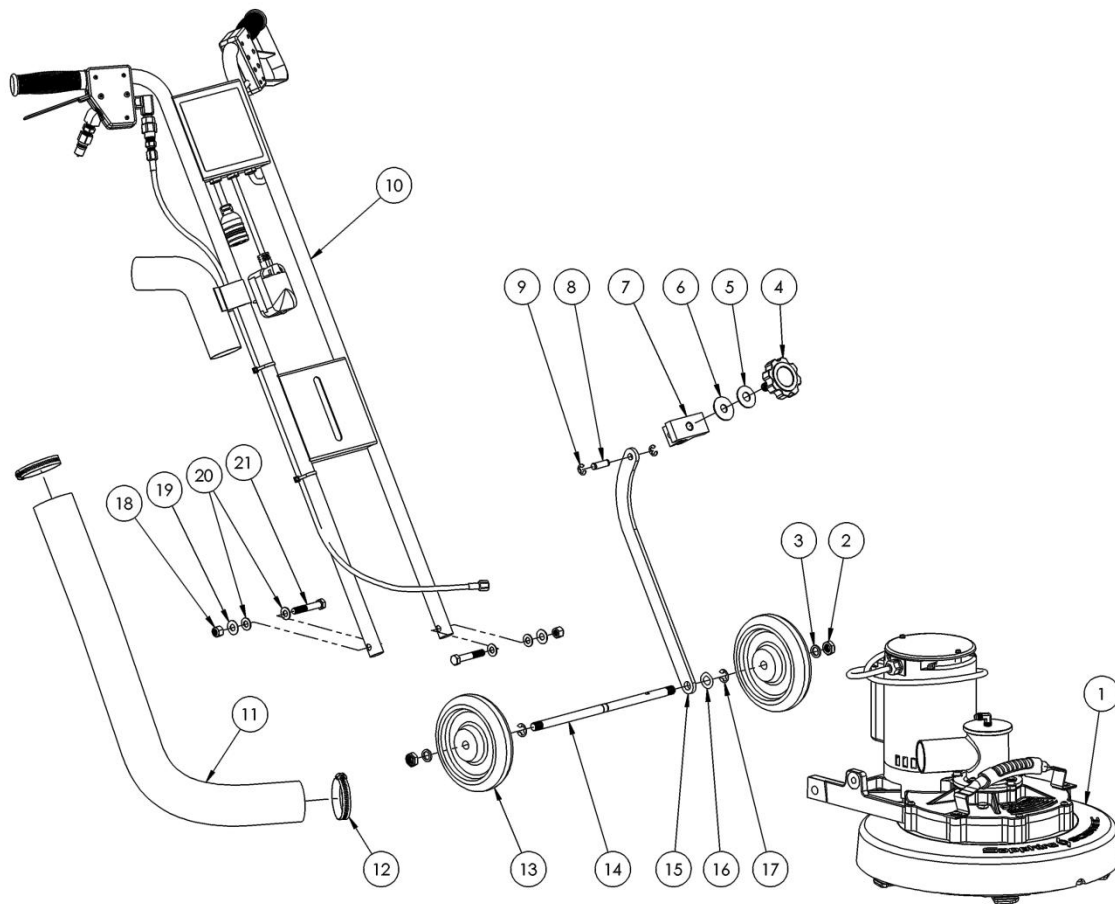


67-029, ASSEMBLY, HOSS 700 240V 50HZ

Item No.	Part Number	Qty	Description
1	69-395	1	ASSY, DRIVE HEAD 240 VOLT 50 HZ
2	11-077	2	NUT, 1/2-20 THIN NYLOK SS
3	12-052	2	WASHER, FLT .505 ID X .75 OD X .093 THK NYLON
4	40-028	1	HANDLE, 2.5 IN DIA FLUTED
5	12-045	1	WASHER, .563 ID X 1.375 OD X .06 THK SS
6	41-116	1	WASHER, HANDLE ADJUSTMENT
7	66-309	1	CLEVIS, HANDLE ADJUSTMENT
8	66-310	1	PIN, SS GROOVED CLEVIS
9	15-036	2	E-CLIP, RETAINING RING .375 SS
10	69-474	1	ASSY, HANDLE 240 VOLT 50 HZ
11	16-106	1	HOSE, 2 IN CLEAR FLEX R-3
12	14-010	2	CLAMP, HOSE #32 SS
13	42-011	2	WHEEL, 6 IN X 1-1/4 W X 1/2 BORE DELRIN
14	66-303	1	AXLE
15	58-487	1	BAR, HANDLE ADJUSTMENT
16	12-064	1	WASHER, WAVE 1/2 SS
17	15-040	2	E-CLIP, RETAINING RING
18	11-035	2	NUT, 3/8-16 NYLOK SS
19	12-060	2	WASHER, FLAT 3/8 SS
20	41-107	4	WASHER, 3/8 ID X 3/4 OD X .06 NYLON
21	10-096	2	BOLT, 3/8-16 X 2-1/4 HHCS SS

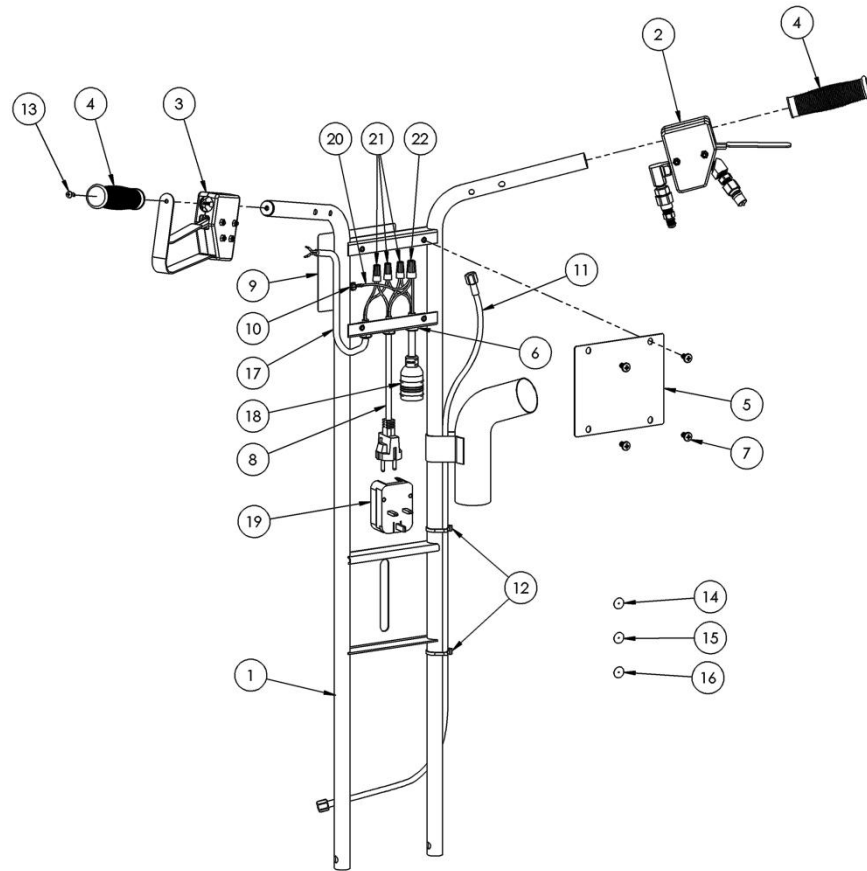


69-474, ASSEMBLY, HANDLE 240 VOLT 50 HZ

Item No.	Part Number	Qty	Description
1	61-675	1	WELDMENT, HANDLE ELECTROPOLISHED
2	69-334	1	ASSY, ANGLE VALVE WITH COVERS
3	69-335	1	ASSY, MOTOR SWITCH WITH COVERS
4	40-029	2	GRIP, CUSHIONED .875 ID X 4.562 LG
5	58-507	1	COVER, ELECTRICAL BOX ELECTROPOLISHED
6	31-200	3	CORD BUSHING
7	10-195	4	SCRWE, MACH 1/4-20 X 1/2 PHP SL SS
8	30-080	1	POWER CORD, 3 X 1.5MM H05VV CEE7/7
9	44-112	1	DECAL, PRODUCT HOSS 700
10	10-204	1	SCREW, 4-WAY HEAD 10-32 X 3/8 GROUND
11	18-215-20	1	HOSE, ASSY FJIC X FJIC W/SS & COVER
12	14-040	2	TIE WIRE 8 IN BLACK
13	10-196	1	SCREW, MACH 10-32 X 1/2 PHP SL SS
14	20-035	1	ORIFICE, .057 DIAMETER SS
15	20-044	1	ORIFICE, .048 DIAMETER SS
16	20-041	1	ORIFICE, .052 DIAMETER SS
17	30-090	1	POWER CORD, ELECTRICAL BOX TO SWITCH
18	30-087	1	POWER CORD, L6-15 TWIST LOCK RCPT
19	30-081	1	PLUG, CONVERTER EURO TO AUSTRALIA
20	30-089	1	WIRE, GROUND 16 GA GREEN/YELLOW
21	31-202	3	WIRE NUT, ORANGE
22	31-203	1	WIRE NUT, YELLOW

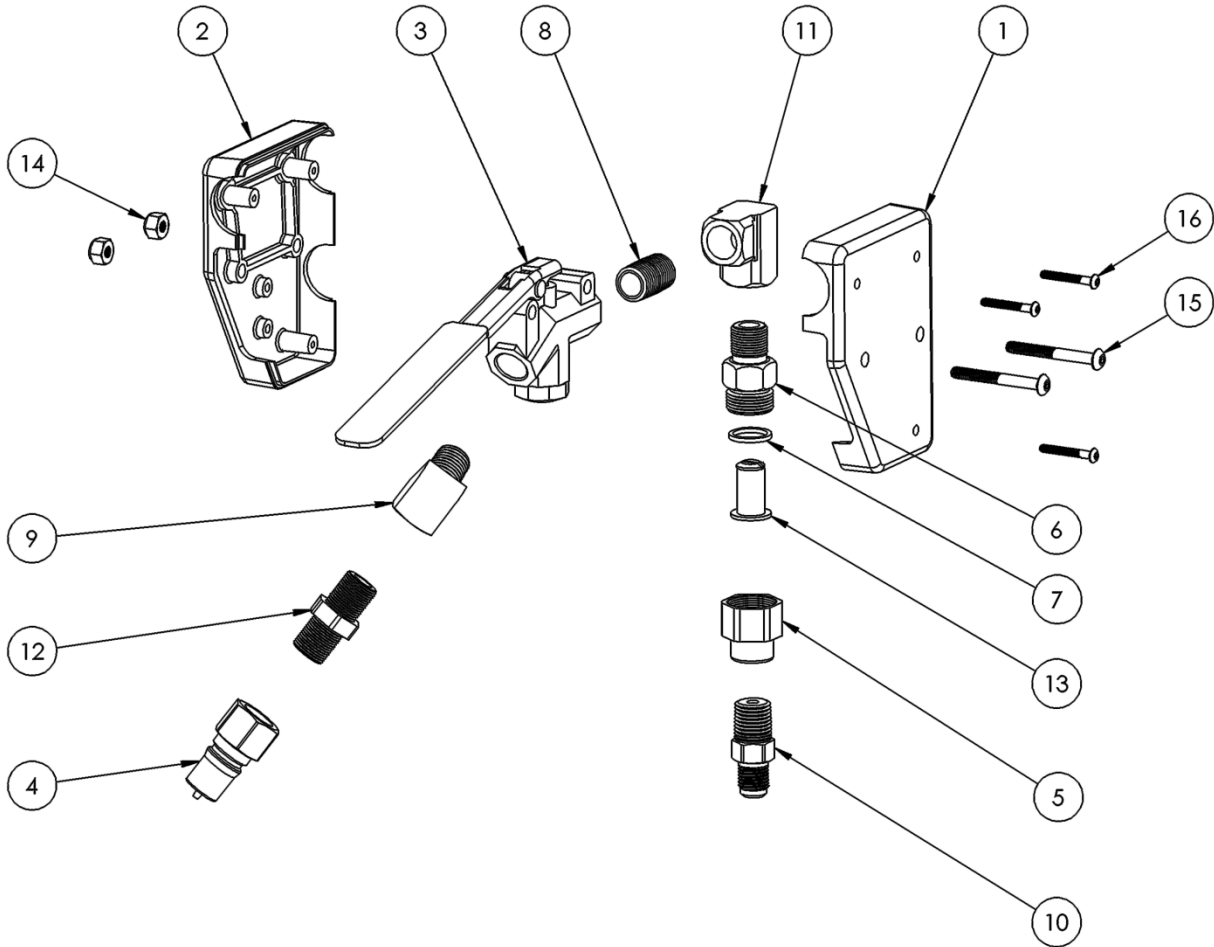


69-334, ASSEMBLY, ANGLE VALVE HANDLE

Item No.	Part Number	Qty	Description
1	51-046	1	MOLDING, VALVE COVER TOP
2	51-045	1	MOLDING, VALVE COVER BOTTOM
3	27-013	1	BRASS ANGLE VALVE
4	25-000	1	QUICK DISCONNECT, 1/4 NPT 1/4 PLUG BRASS
5	24-014	1	FITTING, CONN 1/4 FNPT X 11/16 F BRASS
6	24-004	1	FITTING, CONN 1/4 NPT X 11/16 BRASS
7	24-002	1	WASHER, NYLON
8	21-417	1	NIPPLE, 1/4 NPT CLOSE BRASS
9	21-060	1	ELL, STREET 1/4 NPT 45 DEG BRASS
10	21-050	1	CONN, 1/4 NPT X 1/4 JIC BRASS
11	21-037	1	FITTING, ELBOW 1/4 NPT BRASS
12	21-026	1	NIPPLE, 1/4 NPT HEX BRASS
13	20-037	1	STRAINER, JET 100 MESH
14	11-047	2	NUT, 8-32 SS NYLOK
15	10-229	2	SCRWE, MACH 8-32 X 1-1/2 BHSCS SS
16	10-227	3	SCREW, MACH 4-40 X 7/8 BHSCS SS

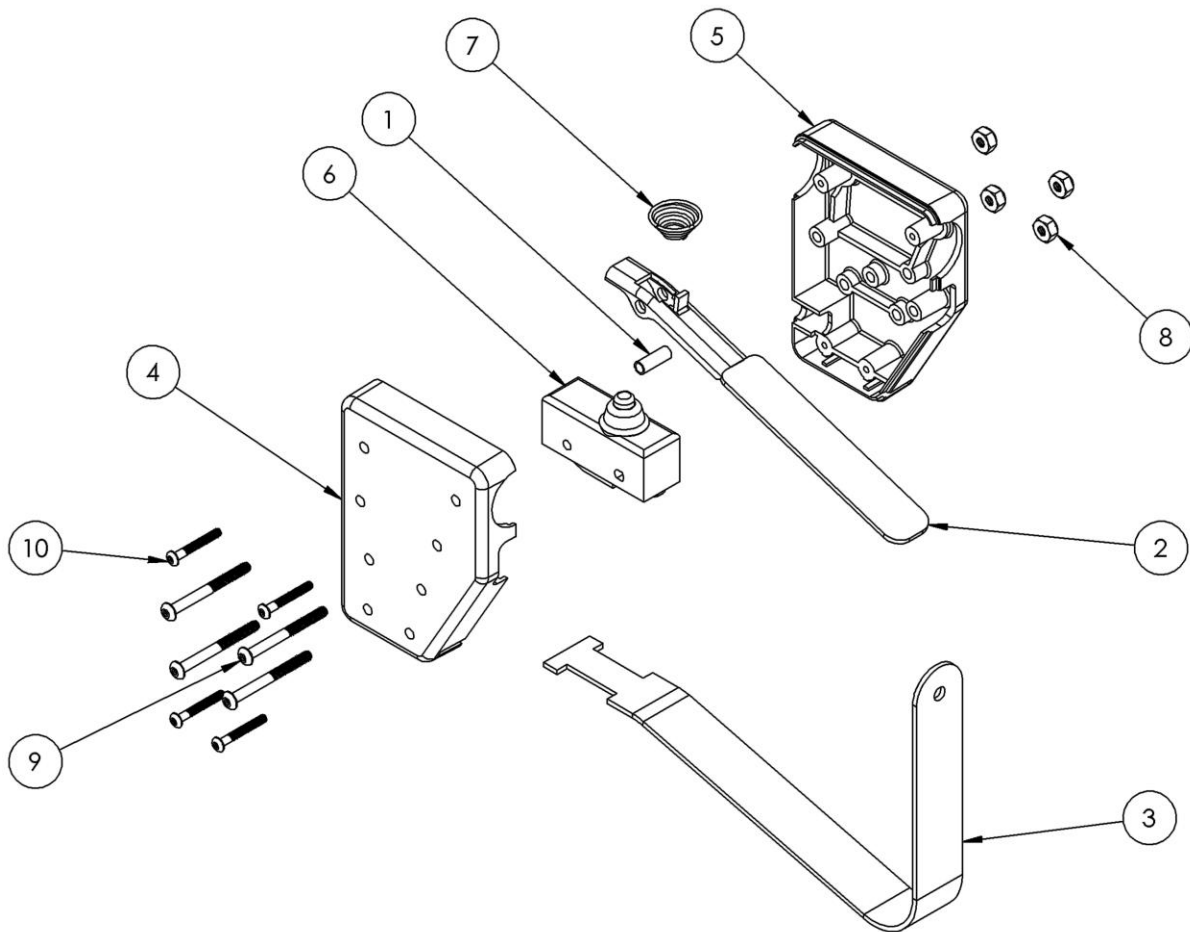


69-335, ASSEMBLY, MOTOR SWITCH HANDLE

Item No.	Part Number	Qty	Description
1	66-342	1	TUBE, HANDLE SUPPORT
2	66-323	1	HANDLE, MOTOR SWITCH
3	58-503	1	PANEL, SWITCH GUARD
4	51-048	1	MOLDING, SWITCH COVER TOP
5	51-047	1	MOLDING, SWITCH COVER BOTTOM
6	29-053	1	SWITCH, 25 AMP LARGE PLUNGER
7	15-045	1	SPRING, CONICAL
8	11-038	4	NUT, 6-32 SS NYLOK
9	10-228	4	SCREW, MACH 6-32 X 1-1/2 BHSCS SS
10	10-227	4	SCREW, MACH 4-40 X 7/8 BHSCS SS

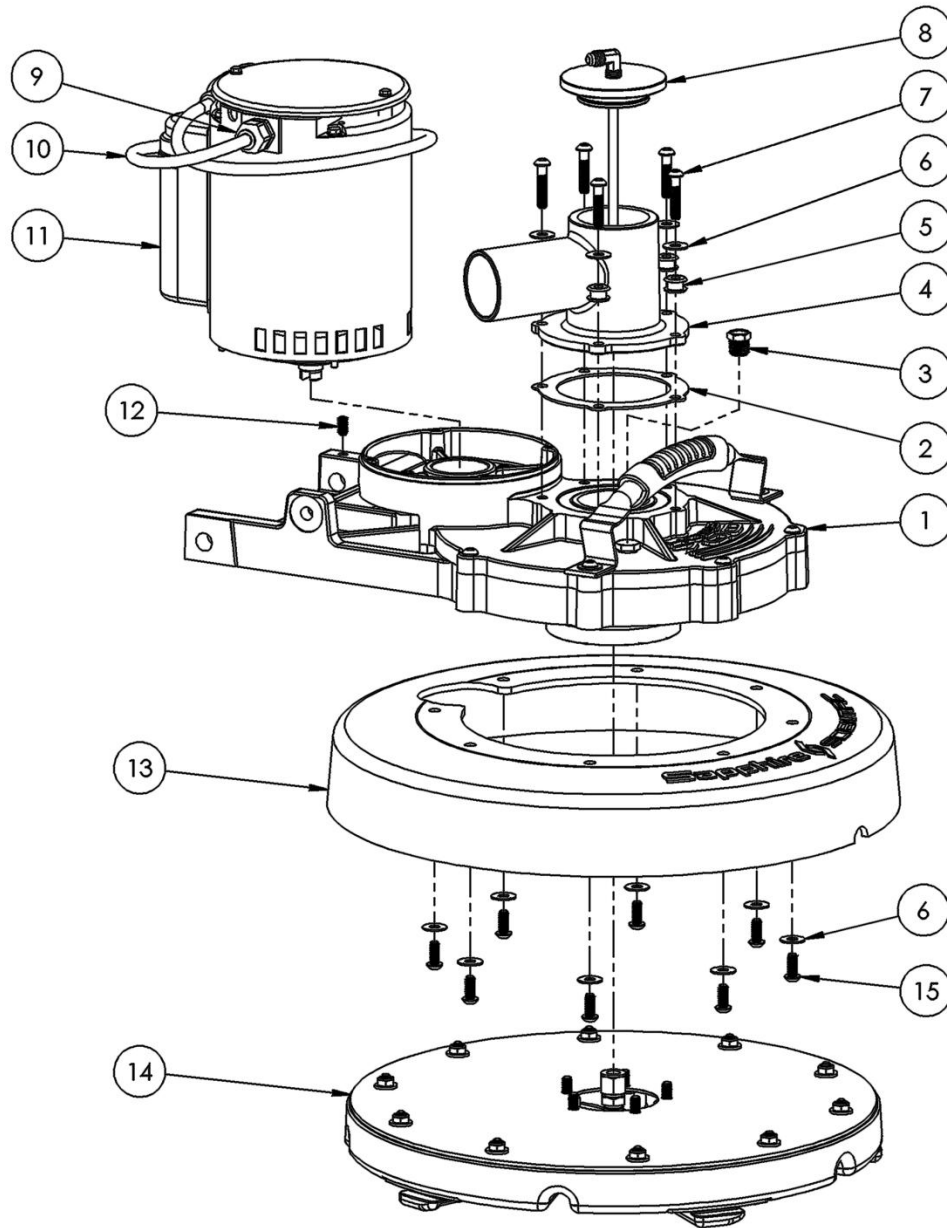


69-395, ASSEMBLY, DRIVE HEAD 240V 50HZ, 1-8

Item No.	Part Number	Qty	Description
1	69-302	1	ASSY, GEAR BOX
2	41-105	1	GASKET, VACUUM INLET
3	20-042	1	VENT PLUG, 1/4 NPT
4	51-039	1	MOLDING, VACUUM INLET
5	41-114	5	GROMMET, 5/8 OD X 1/4 ID X 1/4 PANEL
6	12-059	13	WASHER, .285 ID X .687 OD X .04 THK SS
7	10-226	5	SCREW, MACH 1/4-20 X 1-1/4 BHSCS SS
8	69-337	1	ASSY, VACUUM INLET CAP

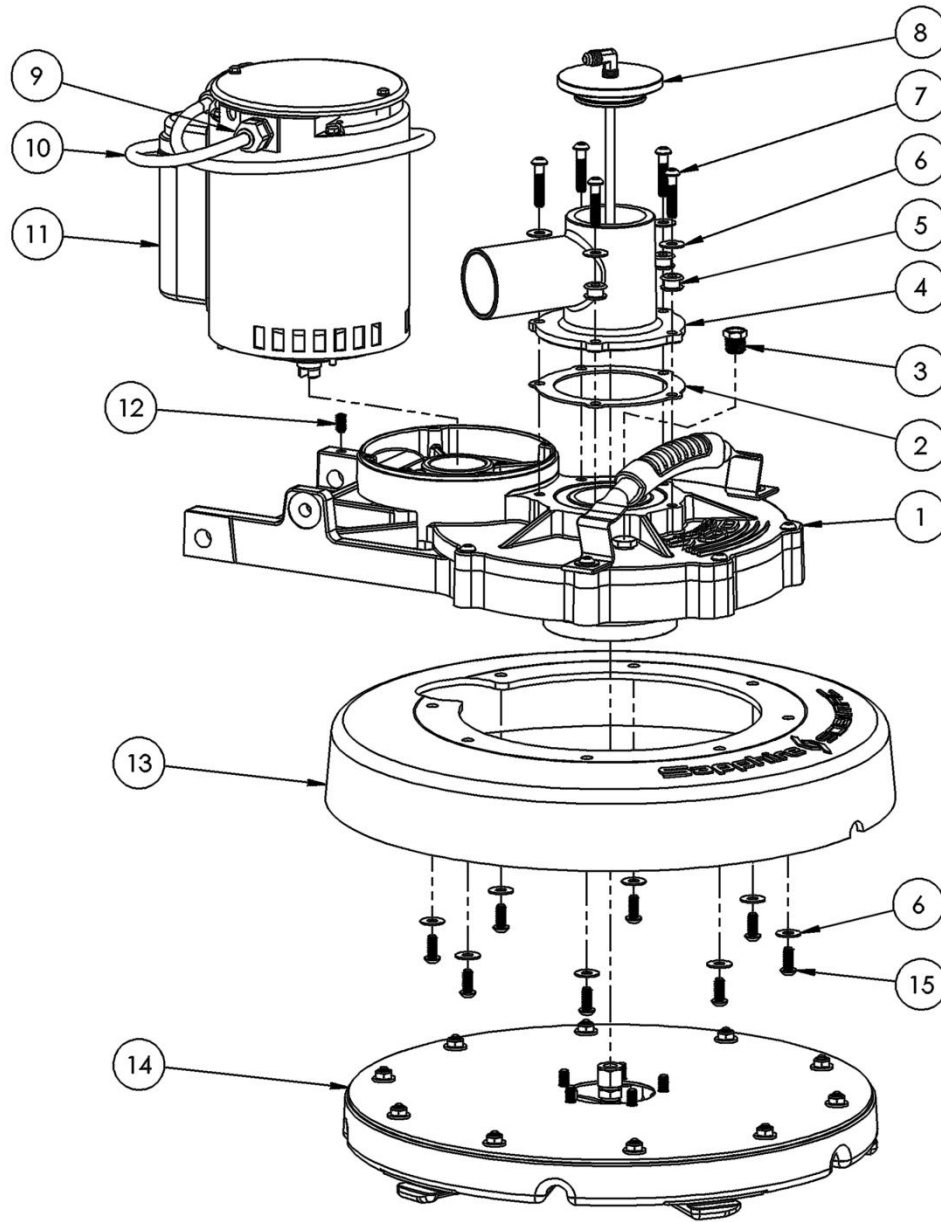


69-395, ASSEMBLY, DRIVE HEAD 240V 50HZ, 9-15

Item No.	Part Number	Qty	Description
9	31-208	1	CORD CONNECTOR
10	30-088	1	POWER CORD, L6-15 TWIST LOCK PLUG
11	45-035	1	MOTOR, .5 HP ELECTRIC 240 VOLT 50 HZ
12	10-237	1	SCRWE, SET 1/4-20 X 1/2 SSSCP
13	51-040	1	COVER, THERMOFORMED
14	69-300	1	ASSY, VACUUM HEAD
15	10-194	8	SCREW, MACH 1/4-20 X 5/8 BHSCS SS

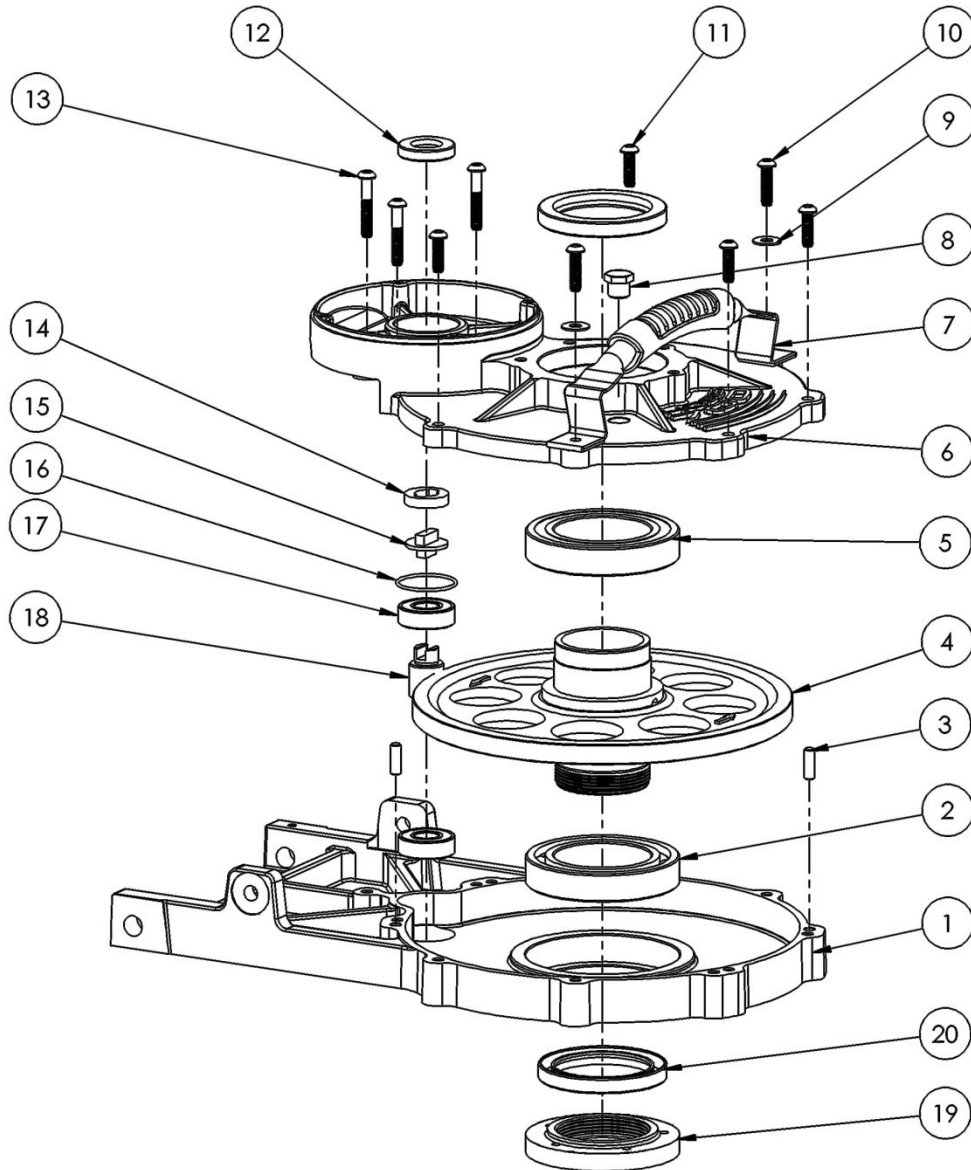


69-302, ASSEMBLY, GEAR BOX, 1-10

Item No.	Part Number	Qty	Description
1	66-299-01	1	BASE FRAME, MACHINED
2	39-038	1	BEARING, 6012 C3
3	15-041	2	PIN, DOWEL 1/4 X 3/4 SS
4	69-378	1	ASSY, OUTPUT SHAFT AND GEAR
5	39-057	1	BEARING, 6012-2RS
6	66-300-01	1	GEAR BOX COVER, MACHINED
7	40-033	1	HANDLE, LIFTING
8	21-426	1	PLUG, 1/4 NPT HEX HEAD PLASTIC
9	12-059	2	WASHER, .285 ID X .687 OD X .04 THK SS
10	10-203	2	SCREW, MACH 1/4-20 X 1 BHSCS SS

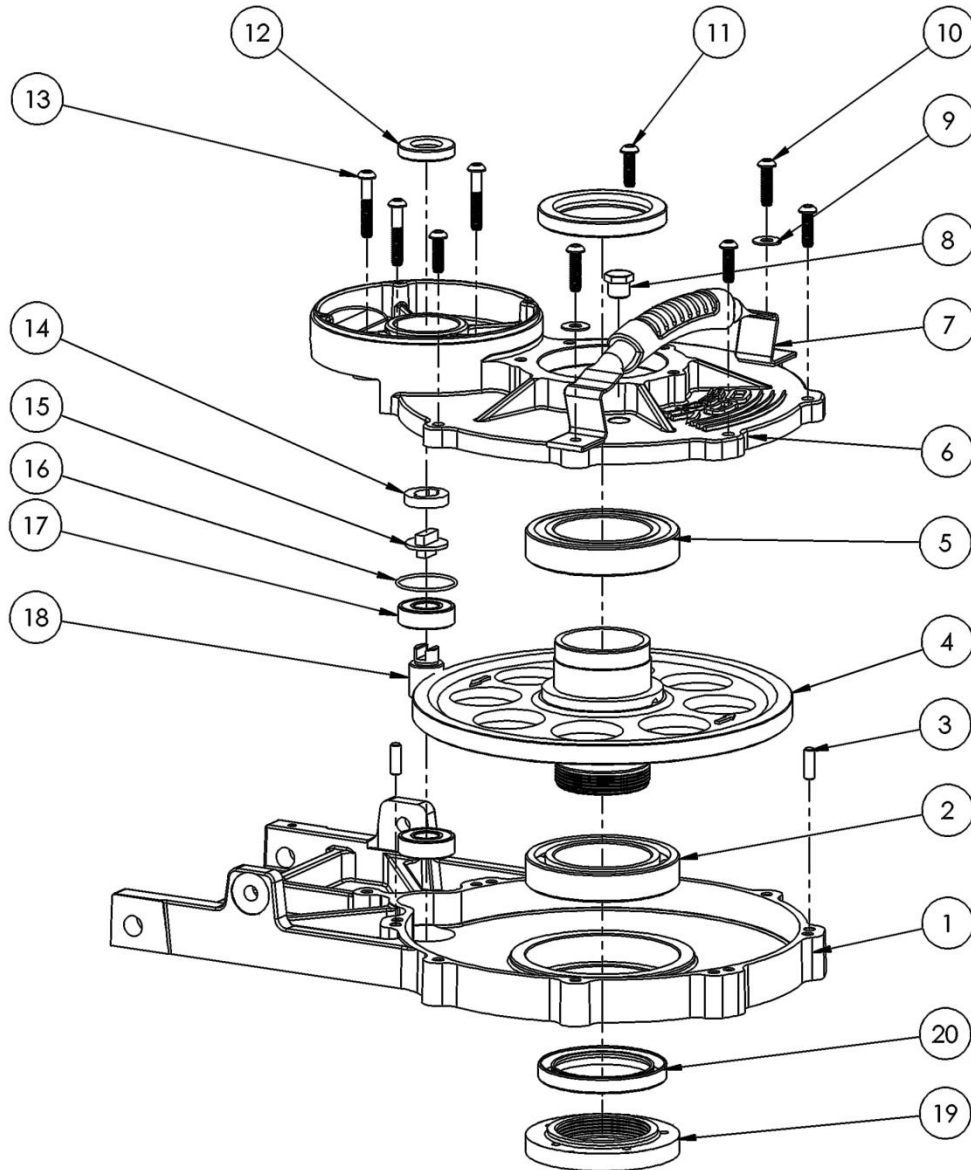


69-302, ASSEMBLY, GEAR BOX, 11-20

11	10-192	4	SCREW, MACH 1/4-20 X 7/8 BHSCS SS
12	39-058	1	SEAL, OIL CR 6640
13	10-197	3	SCREW, MACH 1/4-20 X 1-1/2 BHSCS SS
14	39-045	1	RETAINER, MOTOR COUPLING
15	39-044	1	COUPLING, MOTOR
16	41-102	1	O-RING, AS568A-028 BROWN VITON
17	39-039	2	BEARING, 6202-2RS
18	39-046	1	PINION, HELICAL 14 TEETH
19	66-314	1	FLANGE, HEAD MOUNTING
20	39-040	2	SEAL, OIL

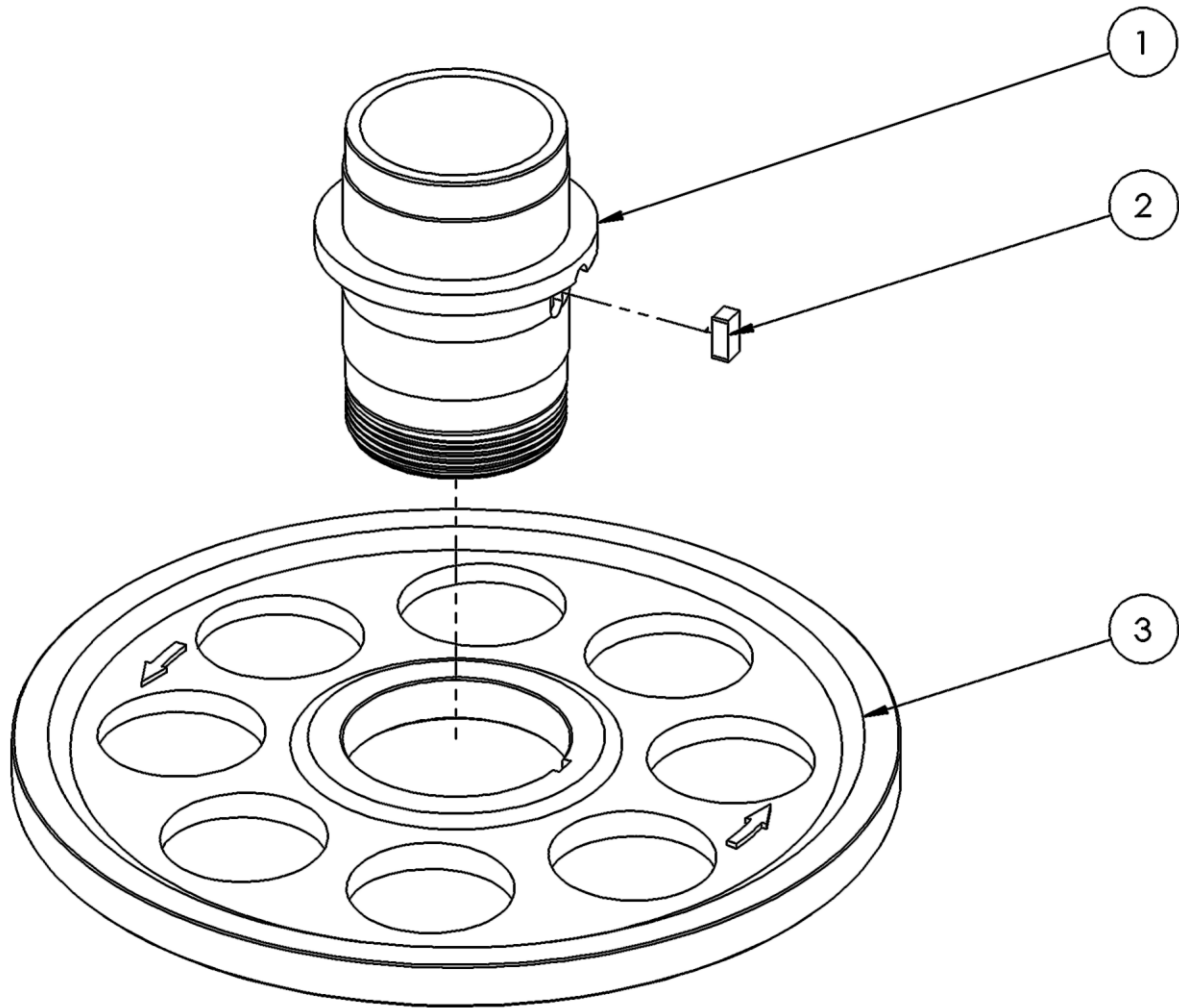


69-378, ASSEMBLY, OUTPUT SHAFT & GEAR

Item No.	Part Number	Qty	Description
1	66-301	1	SHAFT, OUTPUT
2	66-335	1	MACHINED KEY, OUTPUT SHAFT
3	39-047	1	GEAR, HELICAL 172 TEETH

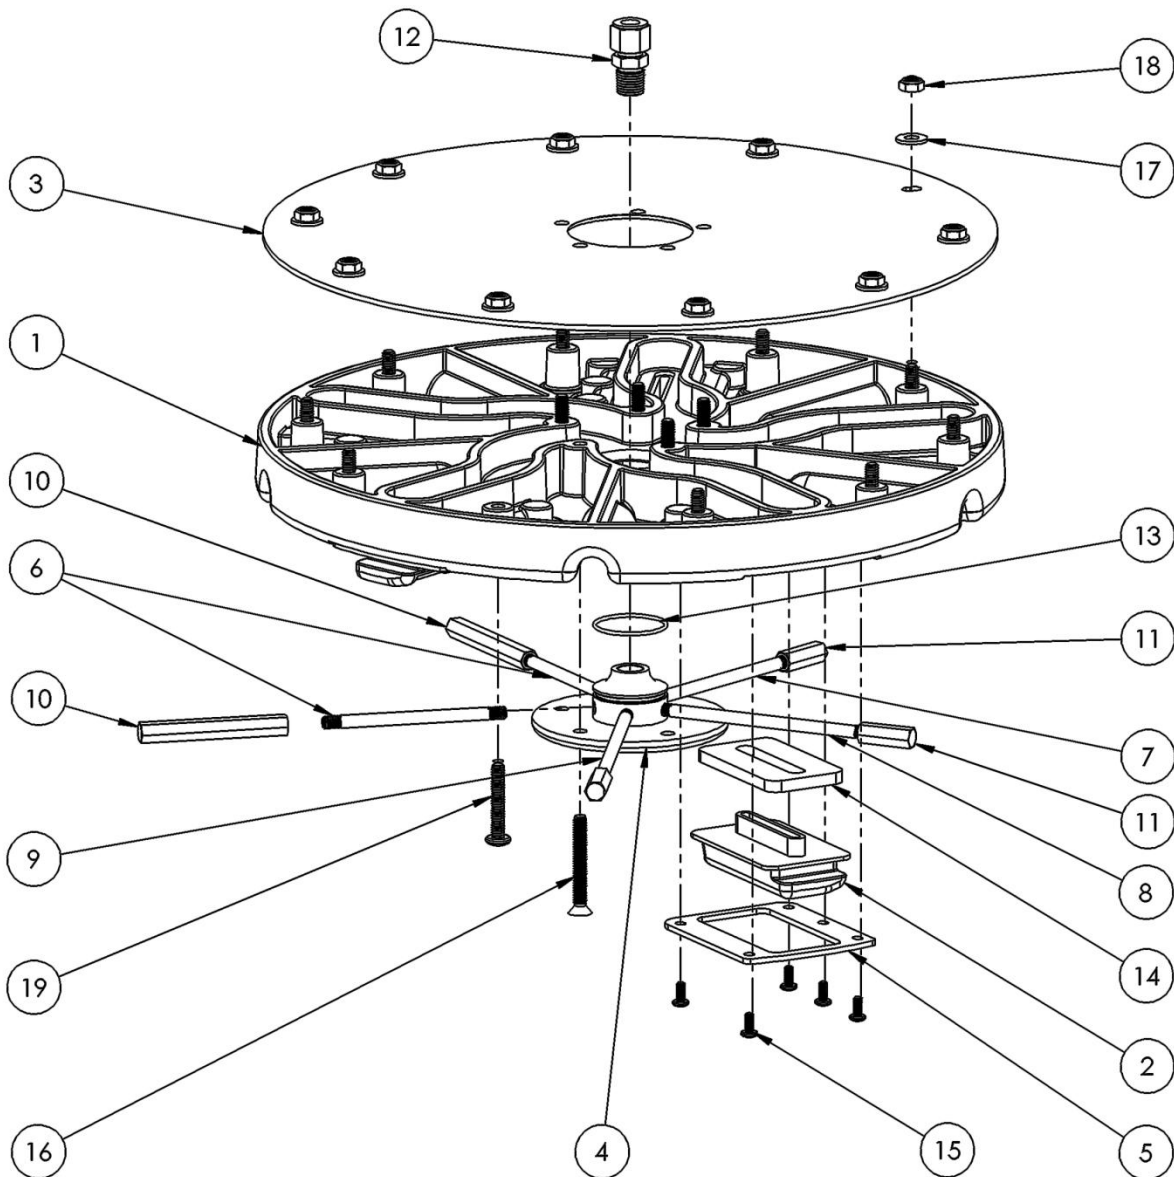


69-300, ASSEMBLY, VACUUM HEAD, 1-10

Item No.	Part Number	Qty	Description
1	51-049	1	ROTARY TOOL HEAD
2	51-041	5	CASTING, VACUUM SHOE
3	58-505	1	PLATE, VACUUM CHAMBER COVER
4	66-304	1	HUB, HEAD MOUNTING
5	58-520	5	PLATE, SHOE COVER
6	66-308-01	2	TUBE, SPRAY HEAD
7	66-308-02	1	TUBE, SPRAY HEAD
8	66-308-03	1	TUBE, SPRAY HEAD
9	66-308-04	1	TUBE, SPRAY HEAD
10	66-362	2	HEAD, SPRAY NOZZLE (15) HOLE

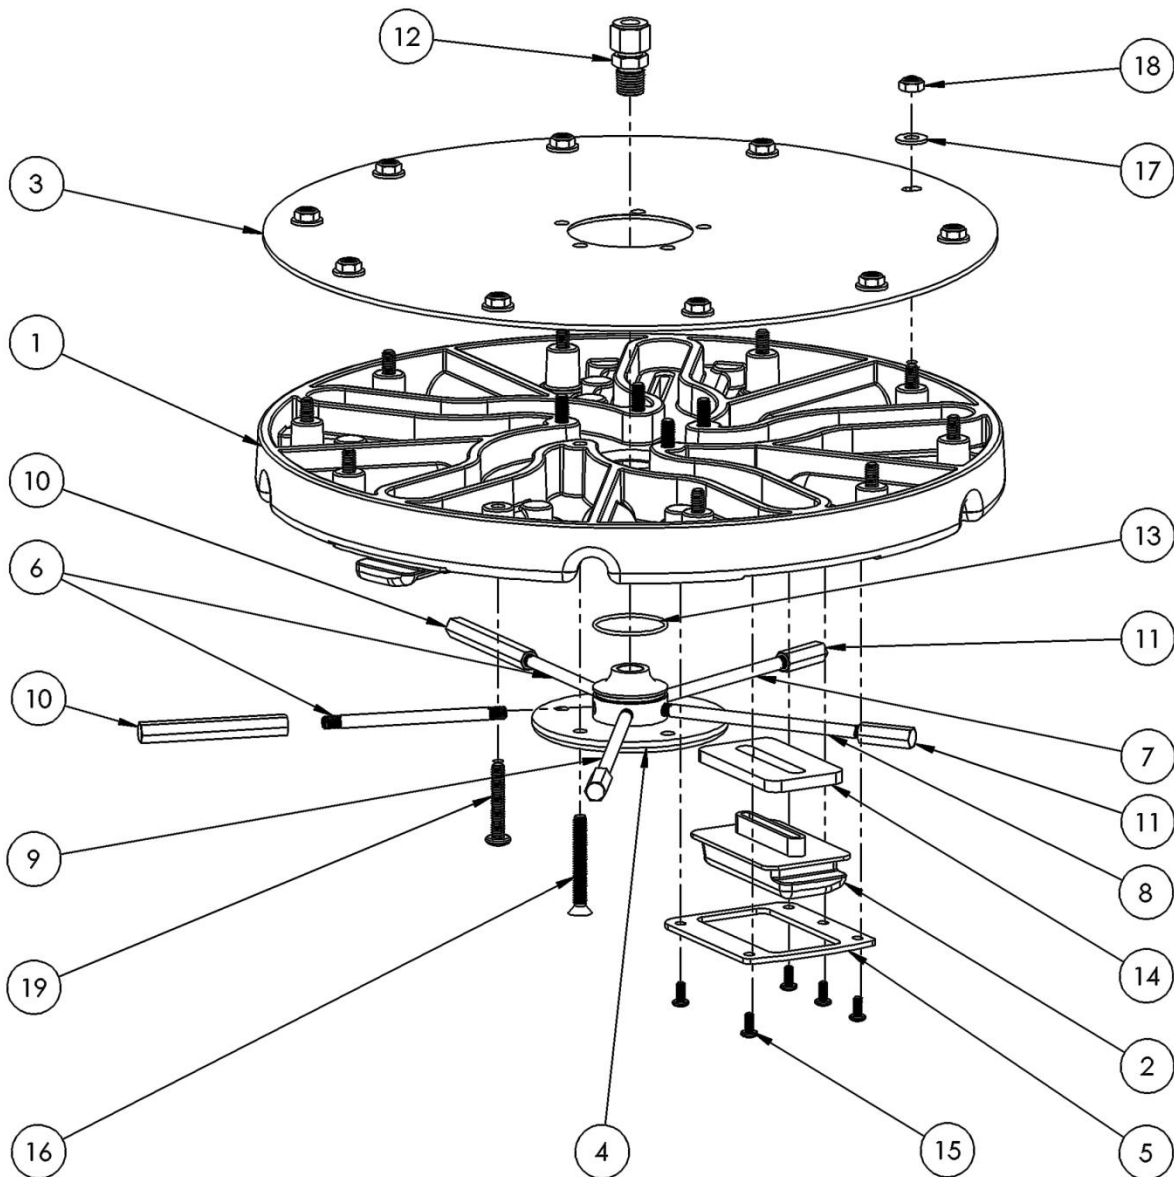


69-300, ASSEMBLY, VACUUM HEAD, 11-19

11	66-361	3	HEAD, SPRAY NOZZLE (4) HOLE
12	69-304	1	ASSY, COMPRESSION FITTING
13	41-102	1	O-RING, AS568A-028 BROWN VITON
14	41-106	5	GASKET, VACUUM SHOE
15	10-199	25	SCREW, MACH 8-32 X 3/8 PHP SS
16	10-200	5	SCREW, MACH 1/4-20 X 2.0 FHP SS
17	12-002	10	WASHER, FLAT 1/4 SS ANC
18	11-086	10	NUT, 1/4-20 SS THIN NYLOK
19	10-198	10	SCREW, MACH 1/4-20 X 1-1/2 PHP SS

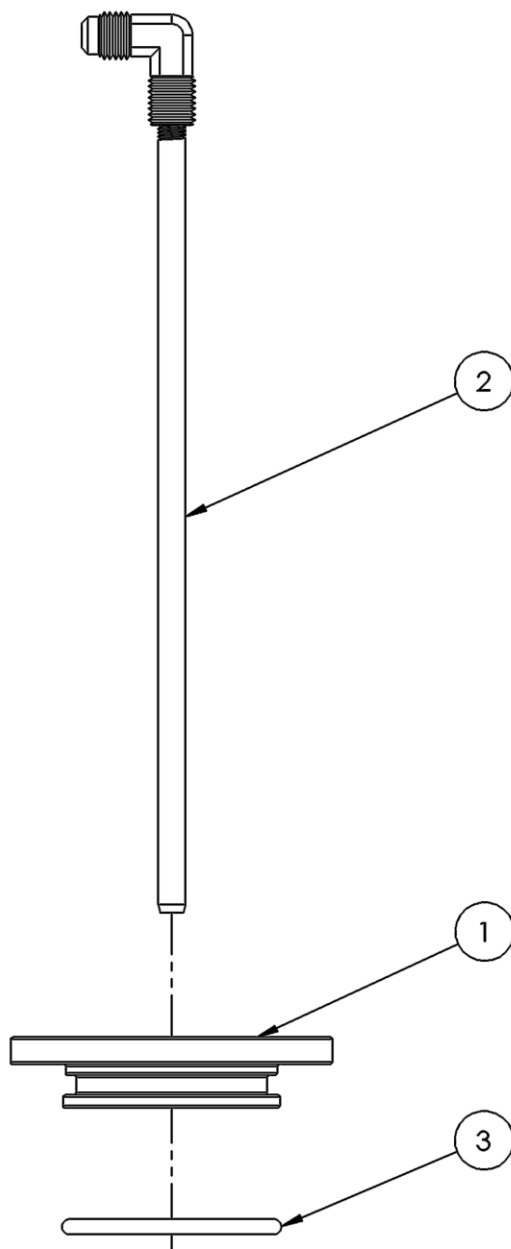

69-337, ASSEMBLY, VACUUM INLET CAP

Item No.	Part Number	Qty	Description
1	51-050	1	MOLDING, VACUUM INLET CAP
2	69-346	1	ASSY, SOLUTION TUBE INLET
3	41-103	1	O-RING, AS568A-222 BROWN VITON

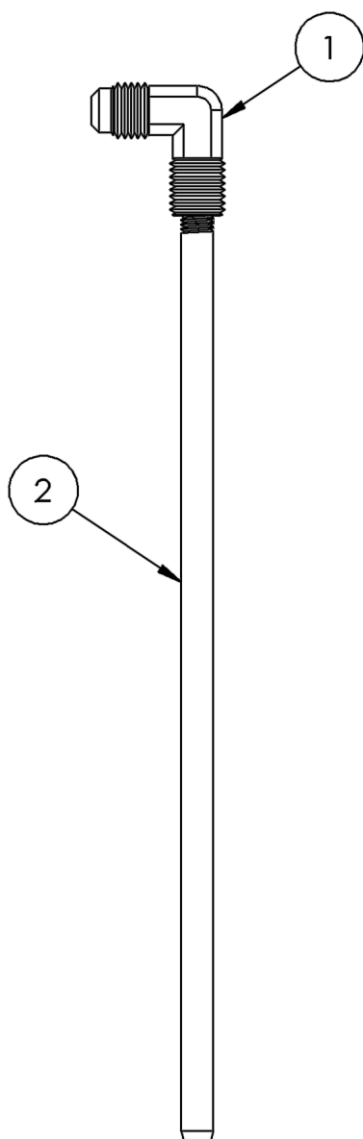

69-346, ASSEMBLY, SOLUTION INLET TUBE

Item No.	Part Number	Qty	Description
1	66-319	1	FITTING, SOLUTION INLET
2	66-318	1	TUBE, SOLUTION INLET

SECTION 6:
REFERENCE INFORMATION

1. REFERENCE

Warranty Registration37

Contact Us.....37

HOSS 700 Specifications.....38

Service Record38

WARRANTY REGISTRATION

Warranty information is included in this manual and also available from your dealer or at www.sapphirescientific.com.

To register your purchase visit warranty.sapphirescientific.com. Registration allows us to better assist you with using, maintaining or servicing your equipment, as well as to contact you in case we have important safety information concerning your HOSS 700. If you determine service is required, have your model, serial number and original proof of purchase available and call your distributor for assistance with obtaining a return material authorization (RMA).

CONTACT US

Sapphire Scientific
2604 Liberator
Prescott, AZ 86301

Phone: 866-445-3030
Fax: 928-445-1946

HOSS 700 SPECIFICATIONS

Model	HOSS 700 240 V 50 HZ Rotary Cleaning Tool
Cleaning width	15 inches / 38 cm head diameter
Use weight	75 lbs / 31 kg
Power	240V / 50Hz
Motor	1/2 HP 1725 RPM
Construction	Lightweight machined aluminum gear box. Stainless steel handle. 6 inch non-scuffing wheels.
Rotary system	Gear-driven rotor with five replaceable long life floating heads
Vacuum system	2 inch tube with clear view vacuum inlet cap.
<i>Specifications are subject to change without notice. Some values may be approximate.</i>	

SERVICE RECORD

Purchase date: _____

Serial number: _____

Distributor: _____

Tel. _____

MAINTENANCE

[illegible]